# Sheet 4B-1 - Fire Basket and Firebox Doors

## Included Ash Pan Version

Fire Basket - 2 no required

End view

Fire basket (design 2)

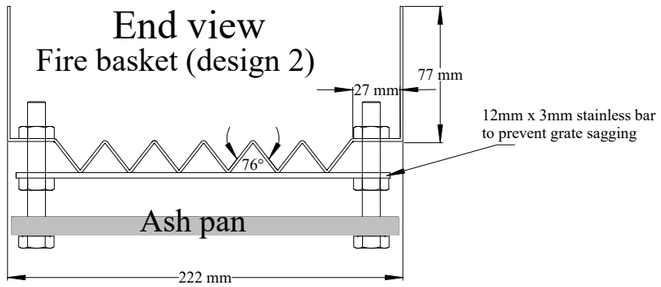


The Ash Pan is permanently fixed beneath the grate. To empty it, the grate unit is lifted out and tipped towards the front. This is why the ash pan has only 3 raised sides.

Plan

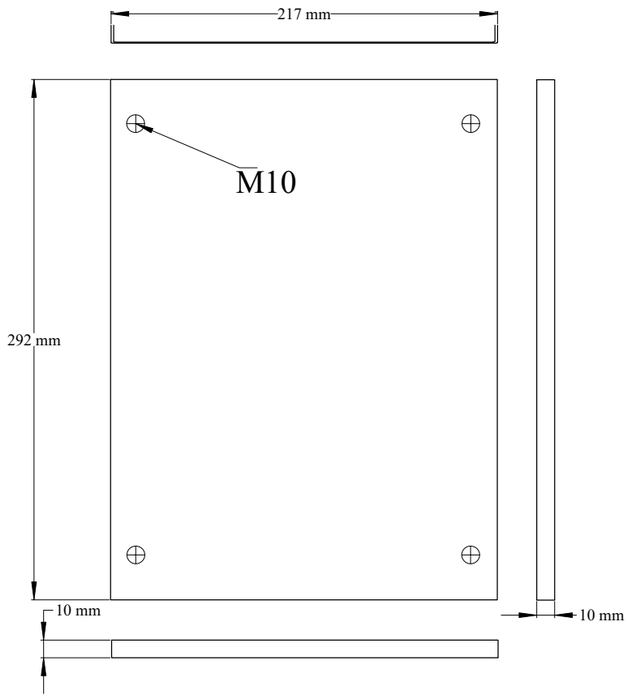


Front

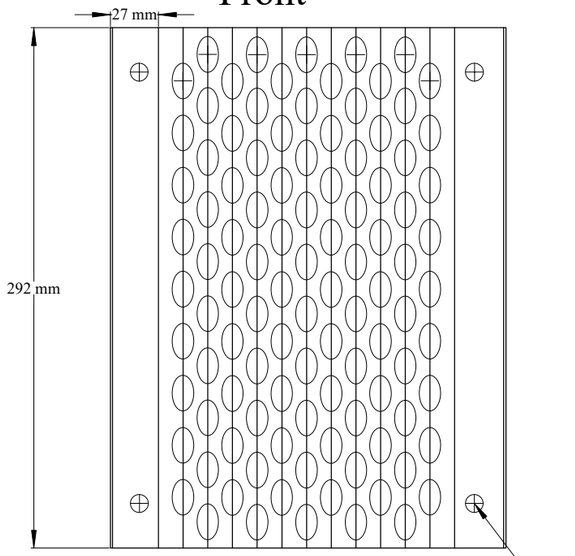


Rear

Fire Basket Unfolded

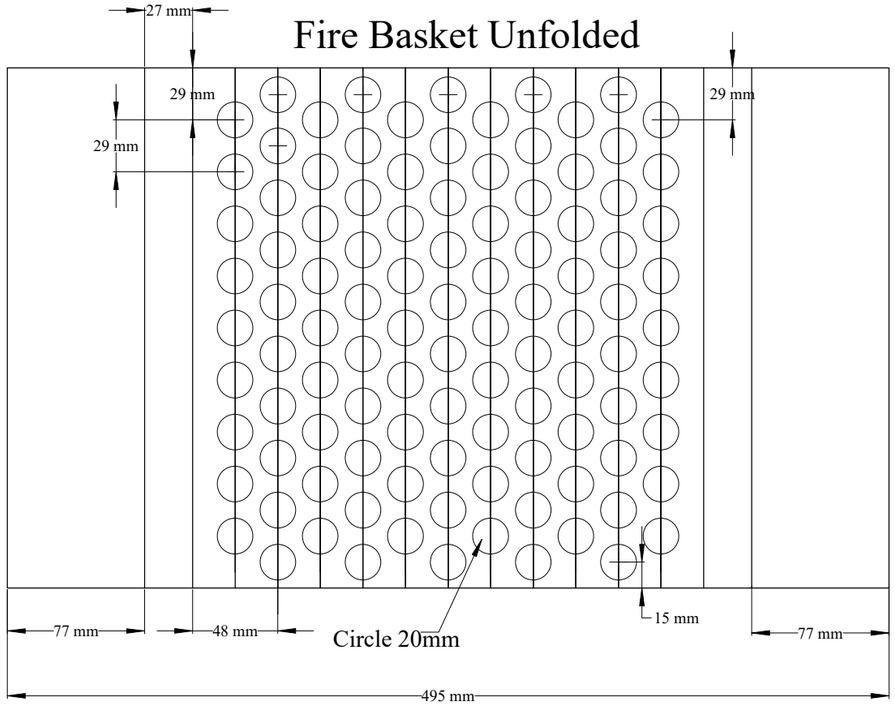


Handle provided by customer.

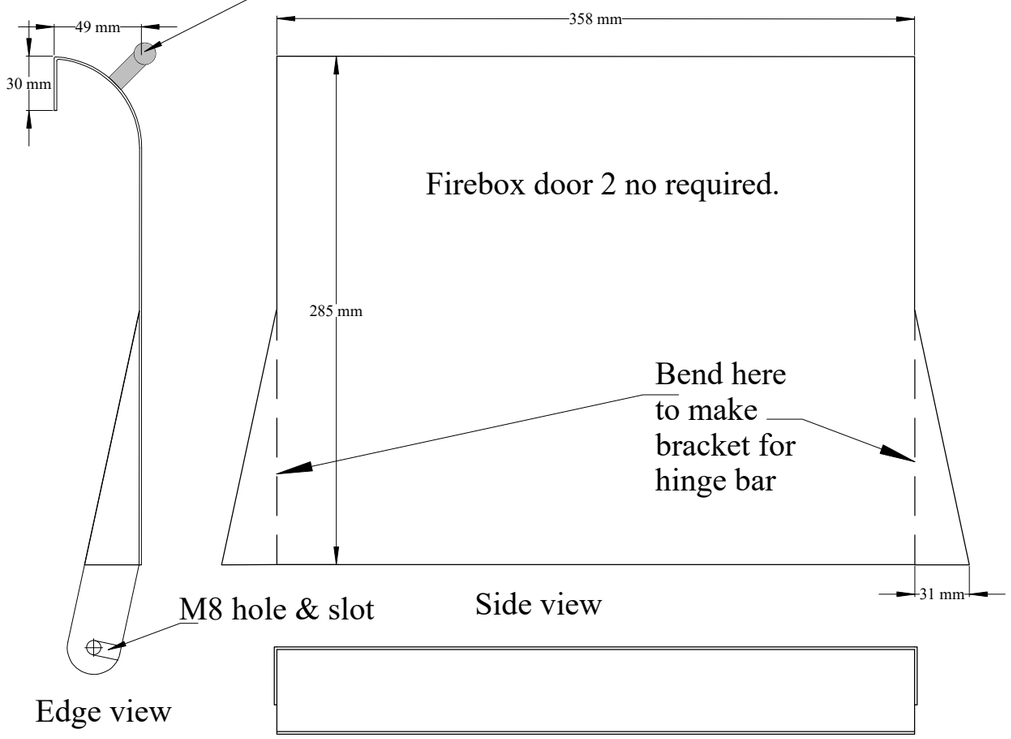


2 hinges from 30mm X 3mm Stainless bar

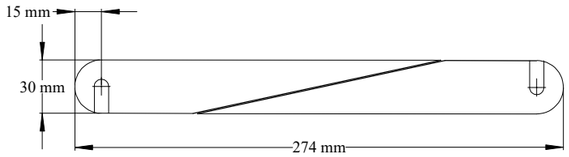


Version 1B - 14 November 2023

(C) 2023 Mono-tube.org.uk